



 
 
 
Video Camera Sony MV1 Disassembly

How to fix bad focus on Sony MV1. I broke my after dropped on the ground, here is how I've fixed it.

Written By: Cafony





Step 1 — Remove back cover

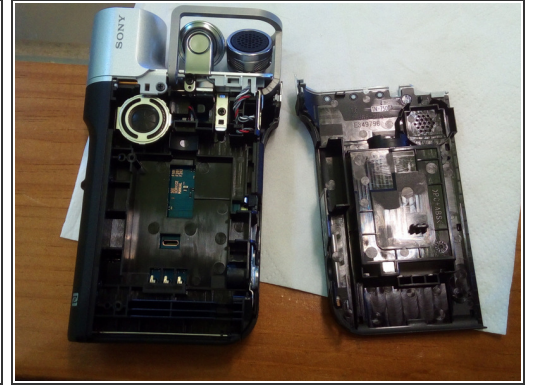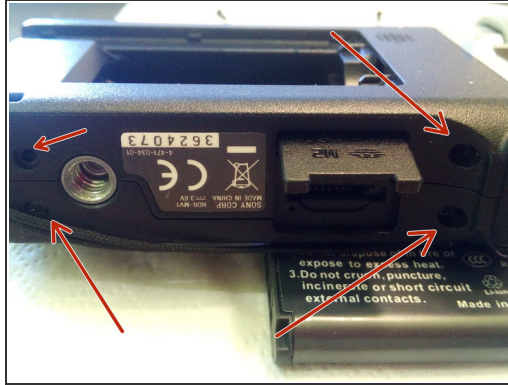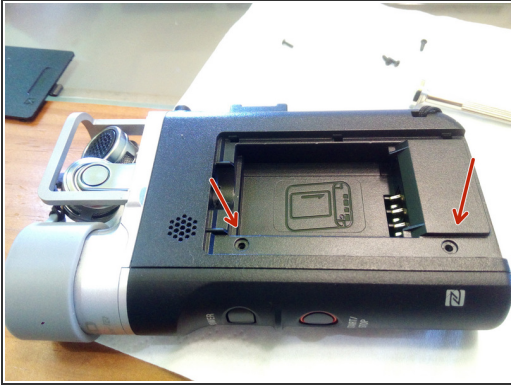




- Insert instructions here.

Step 2 — Remove Screen Cover

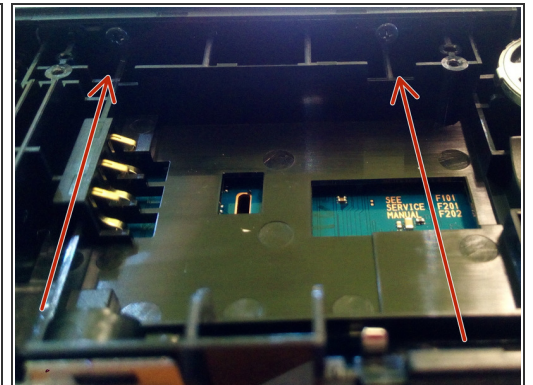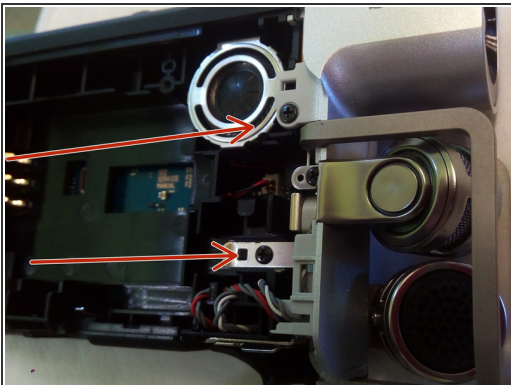



- Insert instructions here.

Step 3 — Remove metal screen support

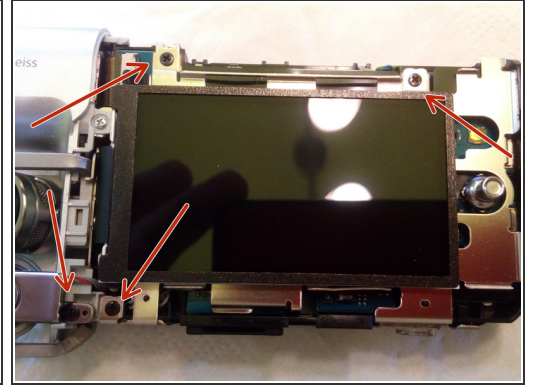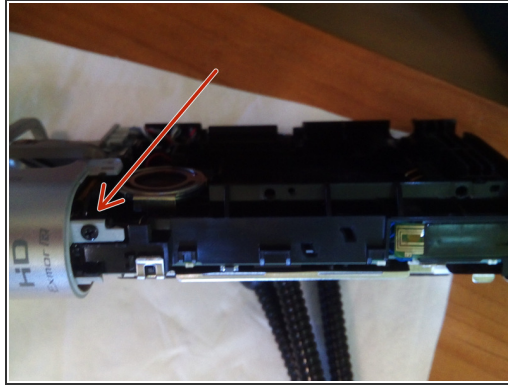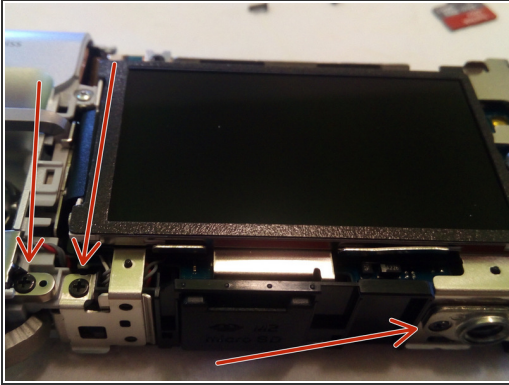




- Insert instructions here.

Step 4 — Remove Mic/Lens support

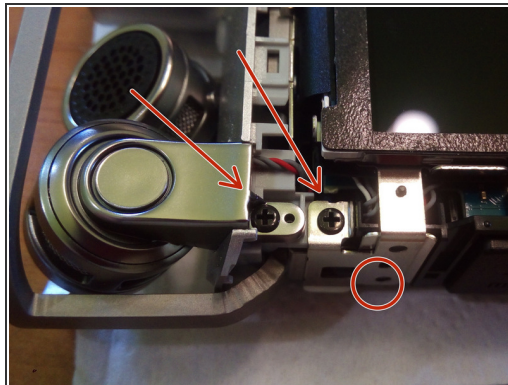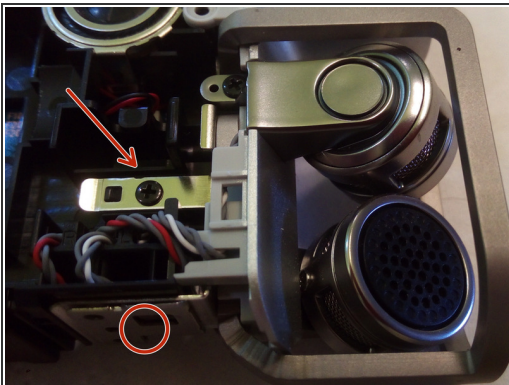



- Insert instructions here.

Step 5 — Remove Lense

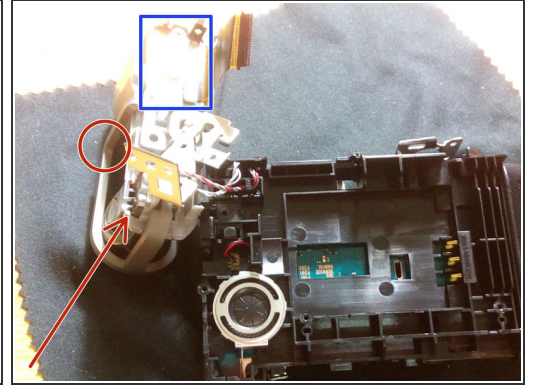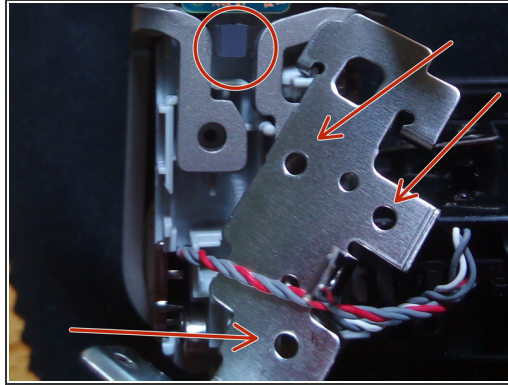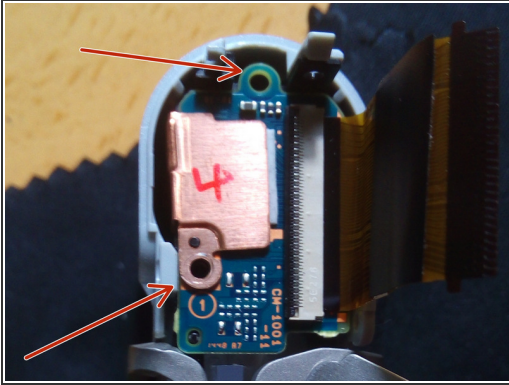


- 1 - Remove 2 screws on lense board.
- 2 - On second photo "cant see" the screws but remove 3, then gently in the circle remove recording plastic light.
- 3 - Remove screw from Microphone so you can remove metal protection to get out lens board.

Step 6 — Focus Lense manually

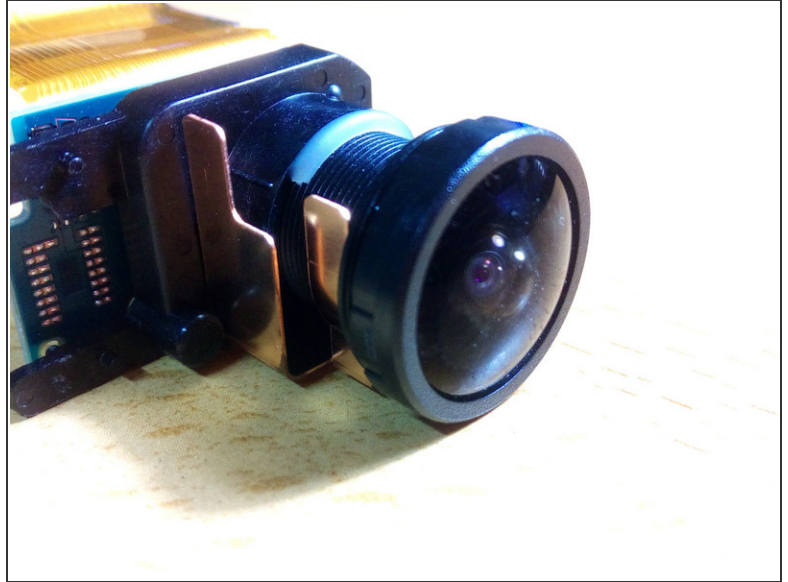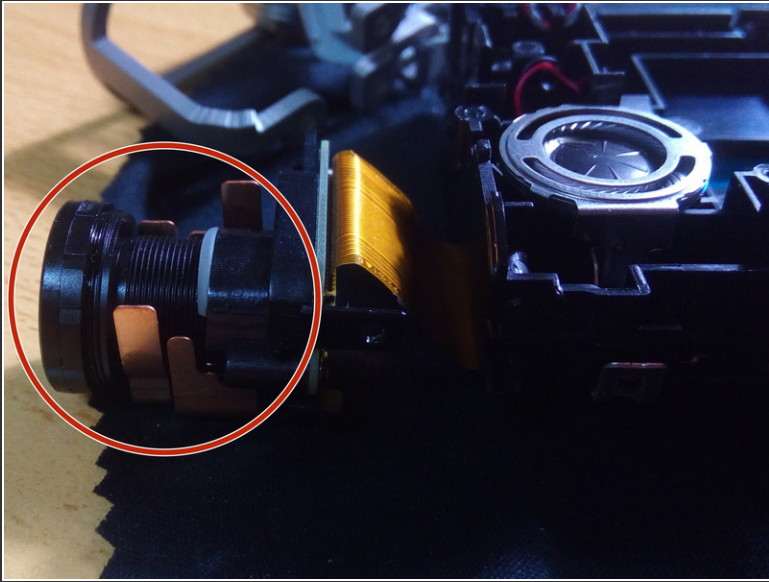



- 1 - The lense can be rotated manually untyl you get it on focus.
- 2 - With camera open insert batery, hold it by hand to make contact.
- 3 - Click power buton and start the camera.
- 4 - Look at screen and with other hand focus the lense.

Step 7 — Add batery and focus manually

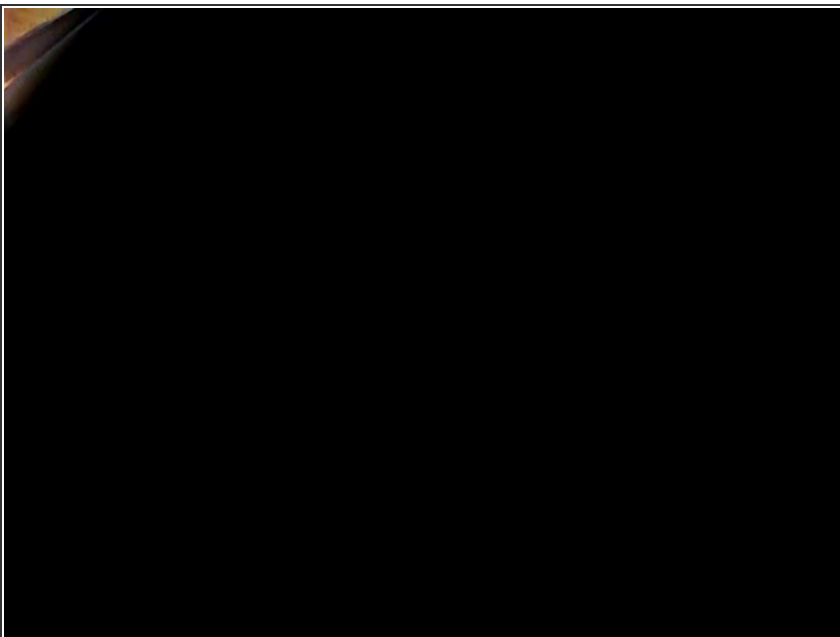

- Insert batery, hold power boton. Check screen and focus lense manually. Enjoy !

Step 8

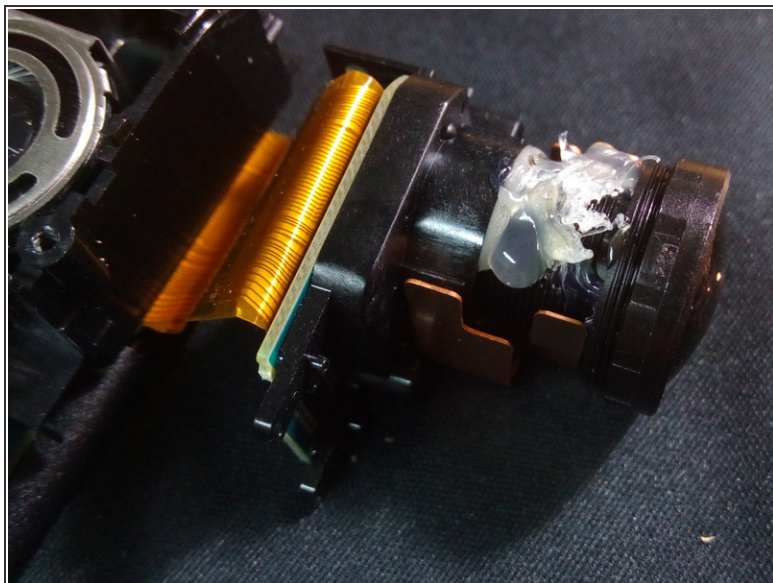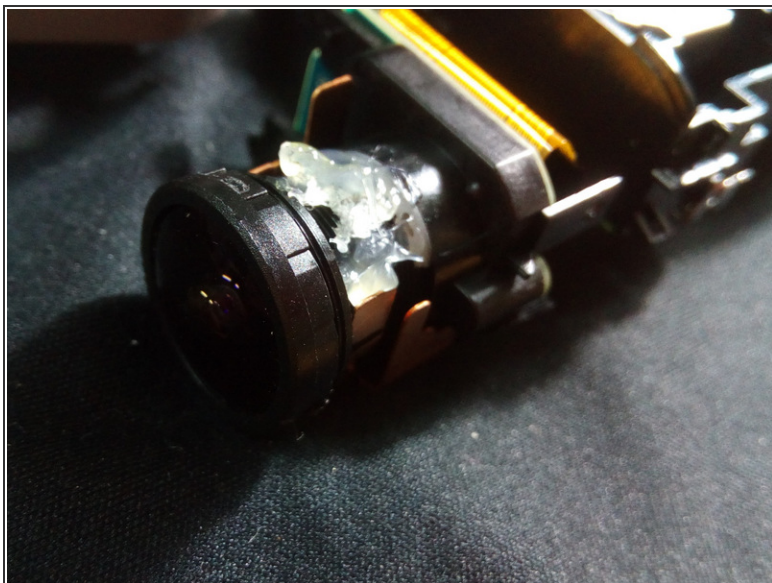

- After you tune the "lens" you should get some Hot Glue on the lens, cause with time it will get out of place. I have to open my camera two times for this reason.

Para remontagem de seu dispositivo, siga estas instruções na ordem inversa.

This document was last generated on 2017-07-17 12:49:10 PM.